# **ScanAirPro**

SMART FILTER SCANNING AND FILTER EFFICIENCY TESTING SYSTEM



HE Lighthouse ScanAirPro System is a particle counter based HEPA/ULPA filter scanning system. It is the only particle counter based, integrated portable system for scanning HEPA/ULPA filters for filter efficiency testing.

Use it to scan filter media for leaks. Incorporating an ergonomic lightweight scanning probe with touchscreen user interface, the ScanAir Pro System also includes a SOLAIR portable particle counter and a dual-port dilutor that can be remotely switched between measurements from the touch screen handle.


When used in conjunction with an aerosol generator (producing DESH, Emery 3004, DOP, paraffin oils, salt solutions or PSL as upstream challenge); the ScanAirPro system allows you to take an upstream and downstream measurement that displays real-time percent leak information on the integrated touch screen display.



- 1 CFM sample rate.
- Detection limits down to 0.1 μm.
- 18 lbs (includes, particle counter, diluter, probe).
- Test filters according to ISO 14644-3
- Touchscreen user interface.
- Upstream and downstream mode of measurement.
- Automatic calculation of alarm threshold.
- Scans and sizes leaks.
- Display % leak during downstream mode.
- Display upstream or downstream measurements.
- Ideal for use on ladders or hard to reach places.





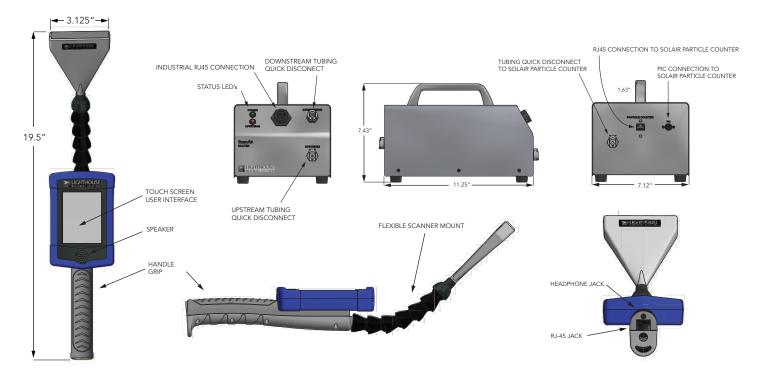

### TECHNICAL DATASHEET

## ScanAirPro Smart Upstream Sampling and Downstream Filter Scanning System.

Features		
Flow Rate	1.0 CFM (28.3 LPM)	
Adjustable Scan Head	YES	
Touchscreen User Interface	YES	
Upstream Measurements	YES	
Downstream Measurements	YES	
Standard Probe Cable and Tubing Length	3 meters (10 foot).	
Communication Integration	Solair Airborne Particle Counters.	
Headphone Jack	YES	
Enclosure	Stainless Steel	
Weight ScanAir Pro Sampling Probe and Head	6 oz (.17 kg)	
Weight Diluter	9.7 lbs (4.4 kg)	

#### Included

Operating manual on CD, USB interface cable, AC adapter, purge filter, and carry case.

#### **Optiona**

Printed Operating Manual, LMS Express Software

#### **Distributed By:**



Lighthouse Worldwide Solutions reserves the right to change specifications without notice.

